



# HP rp5700 Power Supply Replacement

Here are steps to replace the power supply from the desktop.

Written By: Alyssa Briones



## INTRODUCTION


The power supply functions exactly as it sounds, it supplies power to the computer. Some components inside the computer need a direct connection to the power supply whereas others may draw power directly through their connection to the motherboard. Many power supply will have power cables that hang loose inside the case. These loose cables are there in case there are new components added to the computer that need them.

## Step 1 — Cover Removal



- Make sure the computer is unplugged.
- ⚠ Be sure to touch any metal surface with your hand to discharge any static electricity that might have built up.
- Make sure all auxiliary cords are disconnected from the desktop. If not, remove them using your hands.
- Set the desktop down horizontally with the front side facing you.


## Step 2

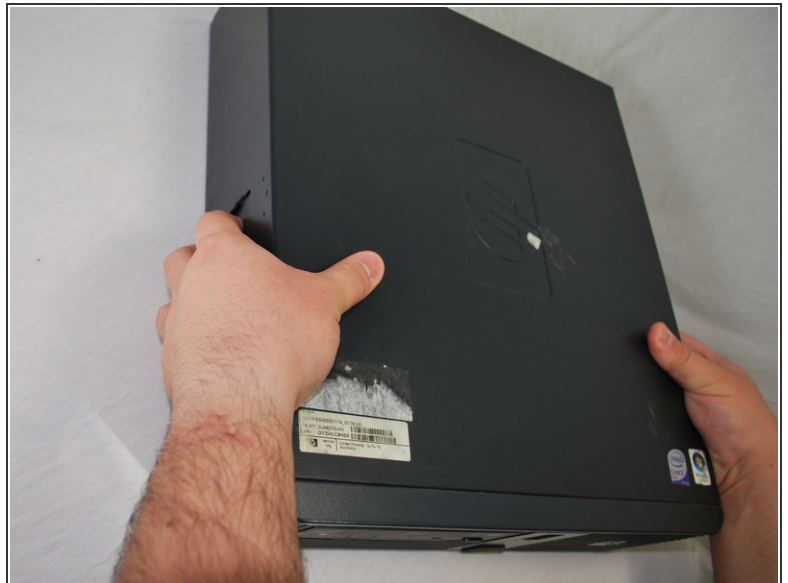

- Hold the desktop with two hands by grasping both sides of the desktop.
- Press the buttons on both sides using your index fingers.



## Step 3

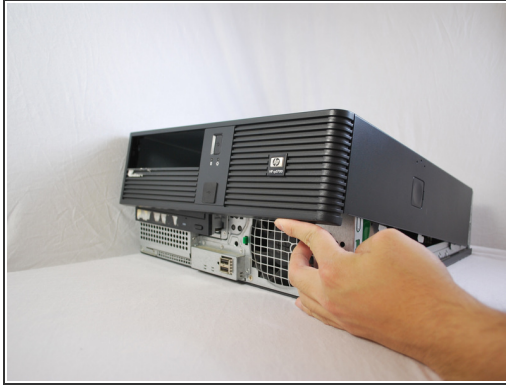

- Slide the top cover about an inch forward using your thumb to push it towards you.
- Make sure that the bottom is still secured by both hands.
- Lay the desktop back on the table and pull the case forward as far as it can go.
- Lift the cover up and off.

## Step 4 — Optical Disk Drive (CD Drive)




- Using your hand, grip the Optical Drive and lift it up into a 45 degree angle.

## Step 5



- Disconnect the power supply cord and the SATA cord using your hands to pull them out.


## Step 6

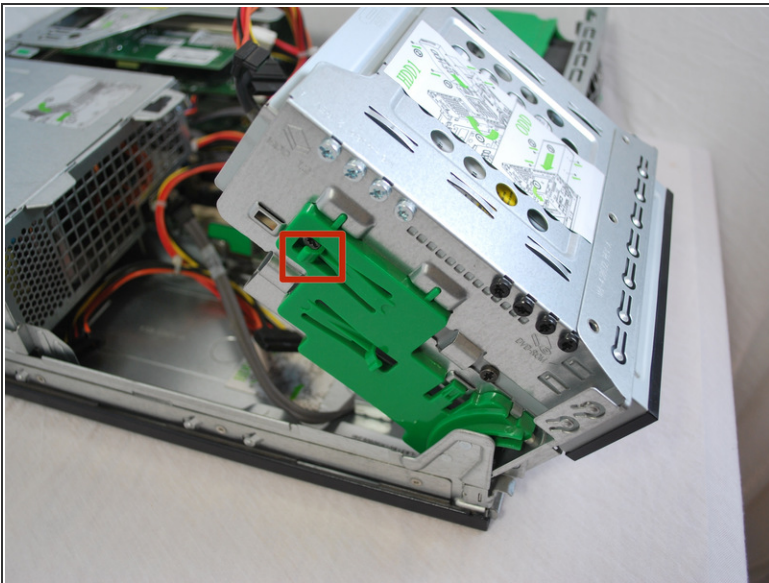

- Using your left index finger, lift the upper green tab found on the left side of the green piece.
- Using your opposite hand, use your fingers to push the back of the drive forward and slide it out away from the desktop.





## Step 7

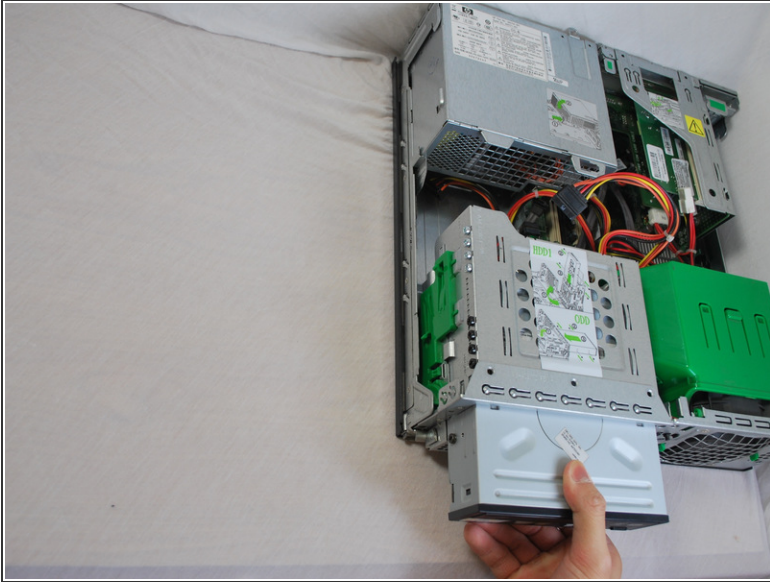


- Grasp the optical drive with your right or left hand and pull the drive out towards you.  
ⓘ It will help if you lay the device flat in order to remove the drive.

## Step 8 — Power Supply

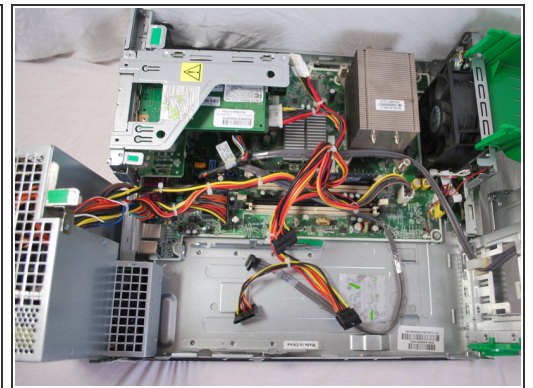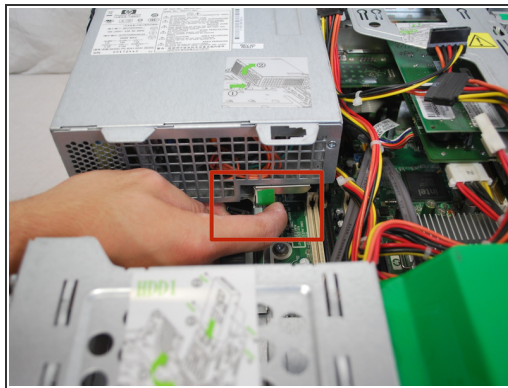

- Using your right index finger, press the tab with the green sticker located underneath the power supply.
- While pressing the tab, lift up the power supply the same way you lifted up the optical drive.  
☑ You lifted the optical drive by grasping it with the opposite hand while pressing the tab and pulling it outward way from the center of the device.


## Step 9

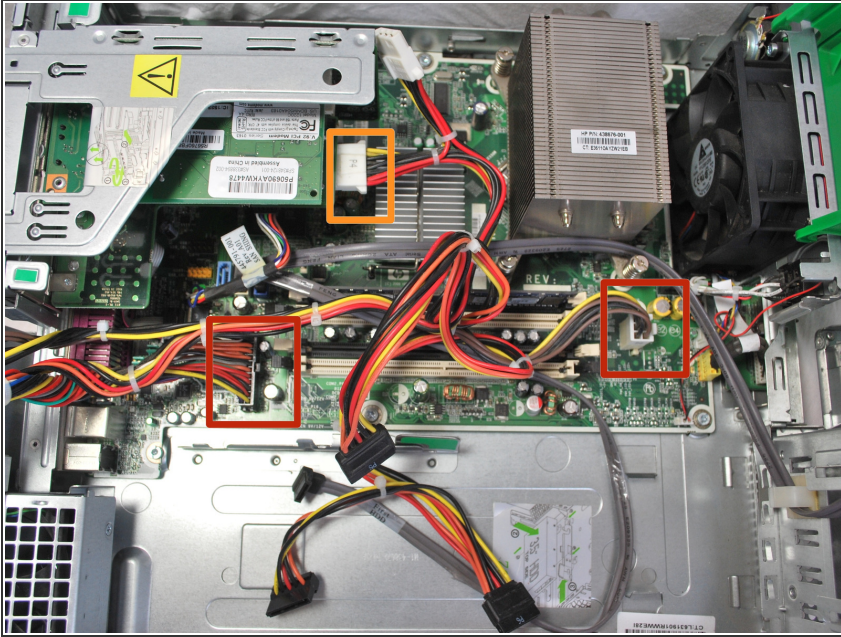

- Remove the two cables on the motherboard by grasping the cables with your hand and pulling the cables up and out.
- Repeat the same process to remove the internal card power cable.
  - This is the same process as preformed when you previously removed the power cables from the optical drive and the hard drive.
  - Some cables may have small clips securing them in place. If so, be sure to press these clips inward using your fingers before pulling them out.



## Step 10

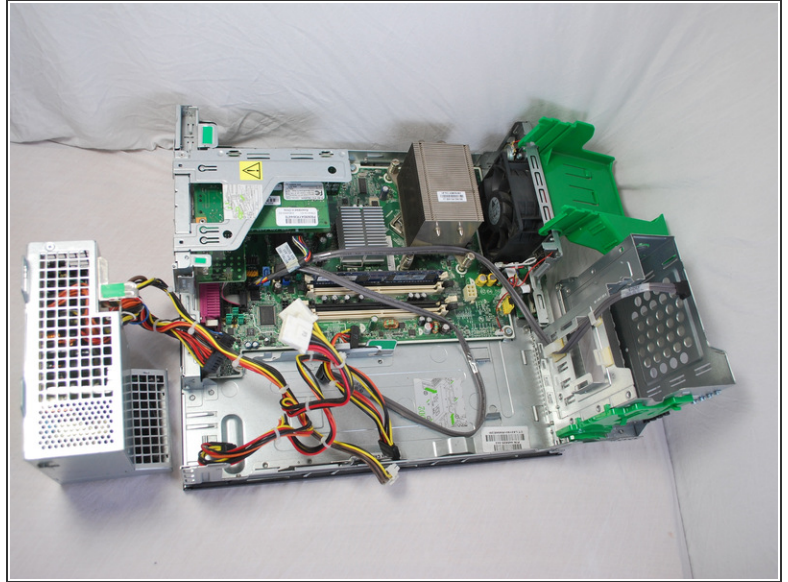

- Continue to rotate the power supply to a 90 degree angle pointing upward.
- Gripping the power supply with your hand, lift the power supply up to remove from the desktop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-25 02:18:22 AM.